 
 




PUMP MOUNTING BRACKET INSTALLATION INSTRUCTIONS

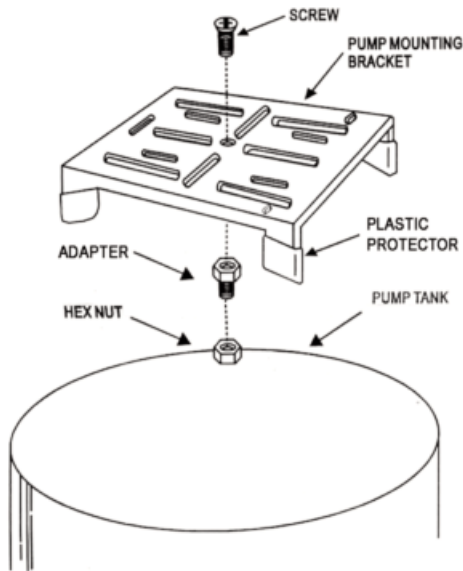

Typical Jet Pump Installation

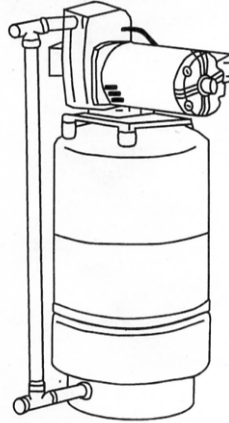

For most* 16" diameter tanks (excluding Flexcon)**
Attach pump mounting bracket to tank using 3/8" x 1" phillips head flat screw. Do not engage screw in top of tank more than 3 turns or the screw thread will puncture the tank shell voiding tank warranty.

For most* 22"-26" diameter tanks (excluding Flexcon)**
Attach pump mounting bracket to tank using 3/8" x 5/8" steel adapter and 3/8" x 1 1/4" phillips head flat screw. Do not engage adapter more than 4 1/2 turns or the adapter thread will puncture the tank shell voiding tank warranty.

* 3/8" x 1 1/2" phillips head flat screw provided for Pentair model tanks only. Use of this screw on other model tanks could lead to tank failure.

** 3/8" x 1/2" steel adapter (marked with "F") provided for Flexcon model tanks with 1/2" top nuts. Use with 1/2" and 3/4" long 3/8" phillips head flat screws provided.

Phone: 800-776-2266 • Fax: 800-729-3299
www.americangranby.com

 
rev 3/20

WARNING:


Failure to follow these instructions could lead to tank failure and void the warranty.



PUMP MOUNTING BRACKET INSTALLATION INSTRUCTIONS

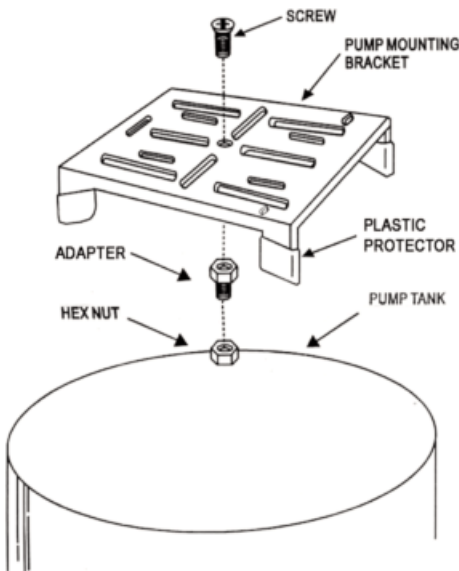

Typical Jet Pump Installation

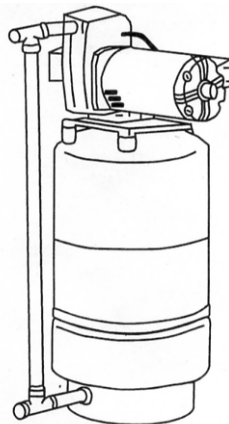 

For most* 16" diameter tanks (excluding Flexcon)**
Attach pump mounting bracket to tank using 3/8" x 1" phillips head flat screw. Do not engage screw in top of tank more than 3 turns or the screw thread will puncture the tank shell voiding tank warranty.

For most* 22"-26" diameter tanks (excluding Flexcon)**
Attach pump mounting bracket to tank using 3/8" x 5/8" steel adapter and 3/8" x 1 1/4" phillips head flat screw. Do not engage adapter more than 4 1/2 turns or the adapter thread will puncture the tank shell voiding tank warranty.

* 3/8" x 1 1/2" phillips head flat screw provided for Pentair model tanks only. Use of this screw on other model tanks could lead to tank failure.

** 3/8" x 1/2" steel adapter (marked with "F") provided for Flexcon model tanks with 1/2" top nuts. Use with 1/2" and 3/4" long 3/8" phillips head flat screws provided.

Phone: 800-776-2266 • Fax: 800-729-3299
www.americangranby.com

rev 3/20

WARNING:

Failure to follow these instructions could lead to tank failure and void the warranty.