

5451NL Series Hydrant Replacement Parts

Part Number	Item Number	Description	List Price
YRK1		Repair Kit (Items 1-8)	\$ 34.09
9175B	1	Plunger - BUNA N rubber/brass	8.57
9023B	2	Fulcrum Bolt - zinc plated steel	0.48
9023C	3	Fulcrum Nut - zinc plated steel	0.37
9023E	5	Set Screw square head - zinc plated steel	0.64
9023A	6	Packing Nut - brass	5.48
29609G	7	Packing - graphite (2 - 1 old, 1 new style)	6.83
9023G	8	Connector - brass	8.66
2506K	9	Handle - powder coated cast iron	20.70
2222AHSS	10	Clevis Rod - SS NEW STYLE (for double bypass)	15.84
2500K	11	Head only - painted cast iron	51.15
382914	13	Hose Adapter - brass	12.38
381504	14	Valve Body - brass	70.20
2575K		Complete Head Assembly (Items 2-13)	110.75

3/4" 5451NL Hydrant Flow Rates

PSI	GPM
10	20 GPM @ 10 PSI
15	25.7 GPM @ 15 PSI
20	29.3 GPM @ 20 PSI
25	32.5 GPM @ 25 PSI
30	35 GPM @ 30 PSI
35	37.5 GPM @ 35 PSI
40	40 GPM @ 40 PSI
45	42.5 GPM @ 45 PSI
50	45 GPM @ 50 PSI


STEEL ROD (use with double bypass valve 5451 Series)

TA7100099NS	54511 Rod (32.4")	16.42
TA7100100NS	54512 Rod (44.4")	21.35
TA7100101NS	54513 Rod (56.4")	26.28
TA7100102NS	54514 Rod (68.4")	28.46
TA7100103NS	54515 Rod (80.4")	36.17
TA7100104NS	54516 Rod (92.4")	41.09
TA7100105NS	54518 Rod (116.4")	50.96

NOTE: All 5451NL Series Hydrants are preset at factory.
There should be no need for any adjustment on initial installation.
Adjust only if water does not shut off or hydrant does not operate properly.

5451NL HYDRANT ADJUSTMENT PROCEDURE

1. Turn water supply OFF.
2. Open hydrant to relieve pressure.
3. Loosen set screw. (Item 2)
4. Push brass rod down as far as it will go by hand to be sure the plunger is touching seat.
5. Open handle (Item 2) approximately 30° from closed position.
6. Tighten set screw snugly.
7. Turn water supply ON.
8. Operate hydrant and make sure hydrant is shutting off properly and flowing properly.
9. **If hydrant still does not shut off, repeat steps 1 through 8.**
10. Flow water through hydrant and then close completely to check for proper drainage by
 - a) listening for water draining down pipe or
 - b) putting your hand over the hose connection to feel for a vacuum.
 If hydrant does not drain, see step 11.
11. To clear drain hole blockage, close off hydrant spout by using hose cap or by attaching and kinking a hose. Open and close hydrant to allow water pressure to clear blockage. Repeat step 10 to verify proper drainage. If hydrant still does not drain, repeat steps 1 through 10 to fully uncover drain hole.

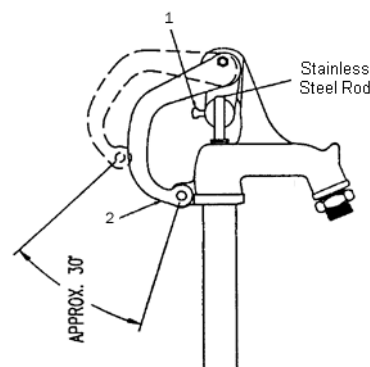

CAUTION: Do not try to make the shutoff adjustment in one attempt or you may overadjust and cause damage to the plunger and rods. For this reason adjust in multiple small increments.